


Mounting instruction RUD-Ecostud anti skid chain



1 Place chain on the tire as shown with studs pointing away from tread.

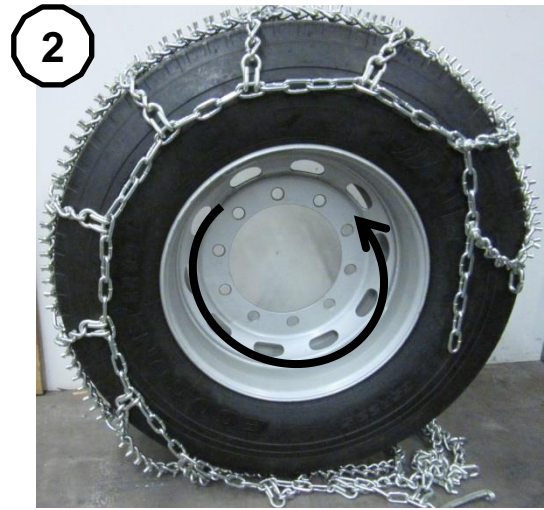

2 Drive 1/4 wheel rotation onward the chain as shown.



3 Take tension lever and pull it through a link in the side chain. If possible take back some links to get the chain tensioned well.



5 Secure end of tension lever in side chain

Repeat this procedure on inner tire side to tension and lock the inner side chain.


If necessary adjust side threads by the shown shackles in side chain on both sides to shorten the chain and dividing side chain evenly.



Mounting instruction RUD-Ecostud anti skid chain



In case your chain model has slotted links to close the chain on tread:

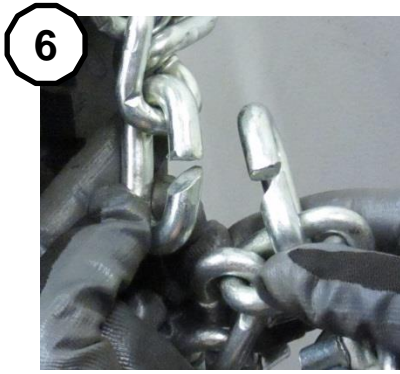

Grab both slotted links (6), turn them to an angle of about 90° to each other(7) and hook them in (8).



Repeat step 6-8 for the other two slotted links. Pay attention to the link threads, that they are not twisted. They need to be straight.

In case your chain model has rings to close the chain on tread:



Pull the chain thread through the rings as shown.



Lock the tread chain on the side chain by shackles.

Repeat step 11 for the other side of the tire.

After 100m driving retension the chain. see step 3-5